

Instructions for Using a Popcorn Machine Rented from *A Grand Event*

Getting Started:



Place machine on secure level surface.



Plug machine into a 120 Volt 15 Amp **GROUND**ED power circuit. Be sure electrical source is sufficient to properly power machine.



DO NOT USE AN EXTENSION CORD!



When ready to begin - Turn machine switches on: LAMP - MOTOR - HEAT.



ON FIRST BATCH ONLY - Let popcorn kettle heat about four (4) minutes before popping first batch.

Popping Corn:



Pour pre-measured oil and seasoning into kettle, then add corn.




Dump kettle when about 99% of kettle contents are popped by rotating the handle of the kettle to dump the popcorn still in the kettle. There is a stop to prevent the kettle from being rotated too far. Return kettle to upright position.



To continue making popcorn repeat steps #1 and #2.



ON FINAL BATCH ONLY - Turn kettle Heat switch OFF as soon as corn starts popping rapidly.

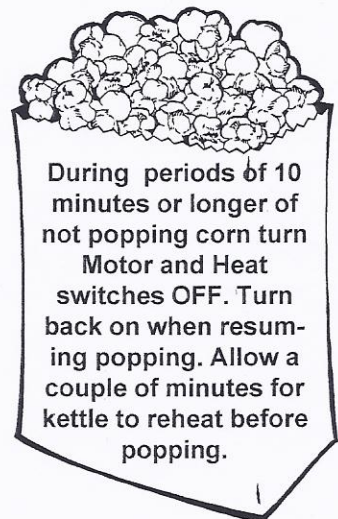

E-Z Cleanup:

Pop Corn Machine:



After final batch - Turn all switches OFF and disconnect machine from power source.



Empty all popped corn from machine and remove kettle.



Clean machine (NOT kettle) with warm soapy water, then warm clear water and towel dry.

Kettle:



Wipe off inside and outside of kettle with DAMP cloth.



DO NOT SUBMERGE KETTLE IN WATER!

Thank you for renting from



We Bring The Party to You.
5020 Nicholson Court
N. Bethesda, MD 20895
301-231-TENT (8368) - Office
www.4agrandevent.com