



*We Bring The Party to You.*

**A Grand Event Party Rentals  
301-231-8368**

**5020 Nicholson Ct., North Bethesda, MD 20895**

## **INSTRUCTIONS FOR OPERATING A TENT HEATER**

1. Make sure heater has been plugged into an electrical outlet and that the hose has been connected to the propane tank.
2. Slowly, turn valve (counter clockwise) on top of the propane tank until it is fully open. Do not open valve quickly as it may trip a safety mechanism in the heater that will turn off the unit. If this does occur, heater must be reset. (see # 5) If there are two propane tanks linked to a single heater, open the valves on both tanks.
3. Turn switch on side of heater to on (up) position.
4. Set the thermostat inside the tent to a desired temperature above 70°. The heater will turn off when desired temperature is reached and turn back on when temperature falls below the indicated level.
5. If heater does not go on, make sure electrical outlet is working and propane tank is open. Be sure to check that the thermostat has been set to a least 70°. If it is still not working, open doors on both ends of the heater and hit the red reset buttons. On heaters that do not have doors on both ends, you will have to remove a grill to access reset buttons.

If heater still does not work, call our office at (301)231-8368. If no one answers, please leave a message and then email us at [info@4agrandevent.com](mailto:info@4agrandevent.com) and someone will get back to you promptly.

6. In case of snow, please turn on the heaters so that the snow on the top of the tent will melt.
7. When heater is no longer needed, turn heater to the off position and close valve on the propane tank until is completely shut.

Thank you for using our services.